
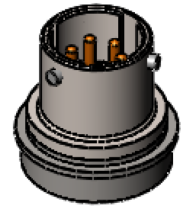


6-PIN BENDIX

Electrical connection option "G"

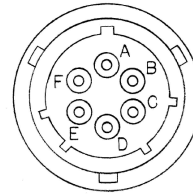

STANDARD MODELS

Output	Pin A	Pin B	Pin C	Pin D	Pin E	Pin F
mV (4-wire)	+V	+Signal	-Signal	Ground	N/A	N/A
Voltage (3-wire)	+V	Signal	N/A	Ground	N/A	N/A
4-20mA (2-wire)	+V	-V	N/A	N/A	N/A	N/A

+V	Supply Voltage
-V	4-20mA Signal/Electrical Ground
Ground	Voltage Electrical Ground
Signal	Voltage Output Signal
Case	Case / Earth Ground
N/A	Not Applicable

CSA APPROVED MODELS

Intrinsically Safe Only

Output	Pin A	Pin B	Pin C	Pin D	Pin E	Pin F
mV (4-wire)	+V	+Signal	-Signal	Ground	N/A	Case
Voltage (3-wire)	+V	Signal	N/A	Ground	N/A	Case
4-20mA (2-wire)	+V	-V	N/A	N/A	N/A	Case

WARNING! NOTICE FOR INTRINSICALLY SAFE SENSORS:

Refer to the Intrinsically Safe Installation Guide for barrier installation information.



Thoroughly read and understand these wiring instructions prior to installation. **Please call Core Sensors at (862) 245-2673** if you are unsure about any of the instructions.

